



FRONT VIEW OF
PERFORATED "Z"
SUPPORT STRIP
20 OZ 60% NET
FREE AREA

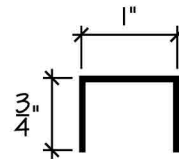

FRONT VIEW OF
SUPPORT BRACKET

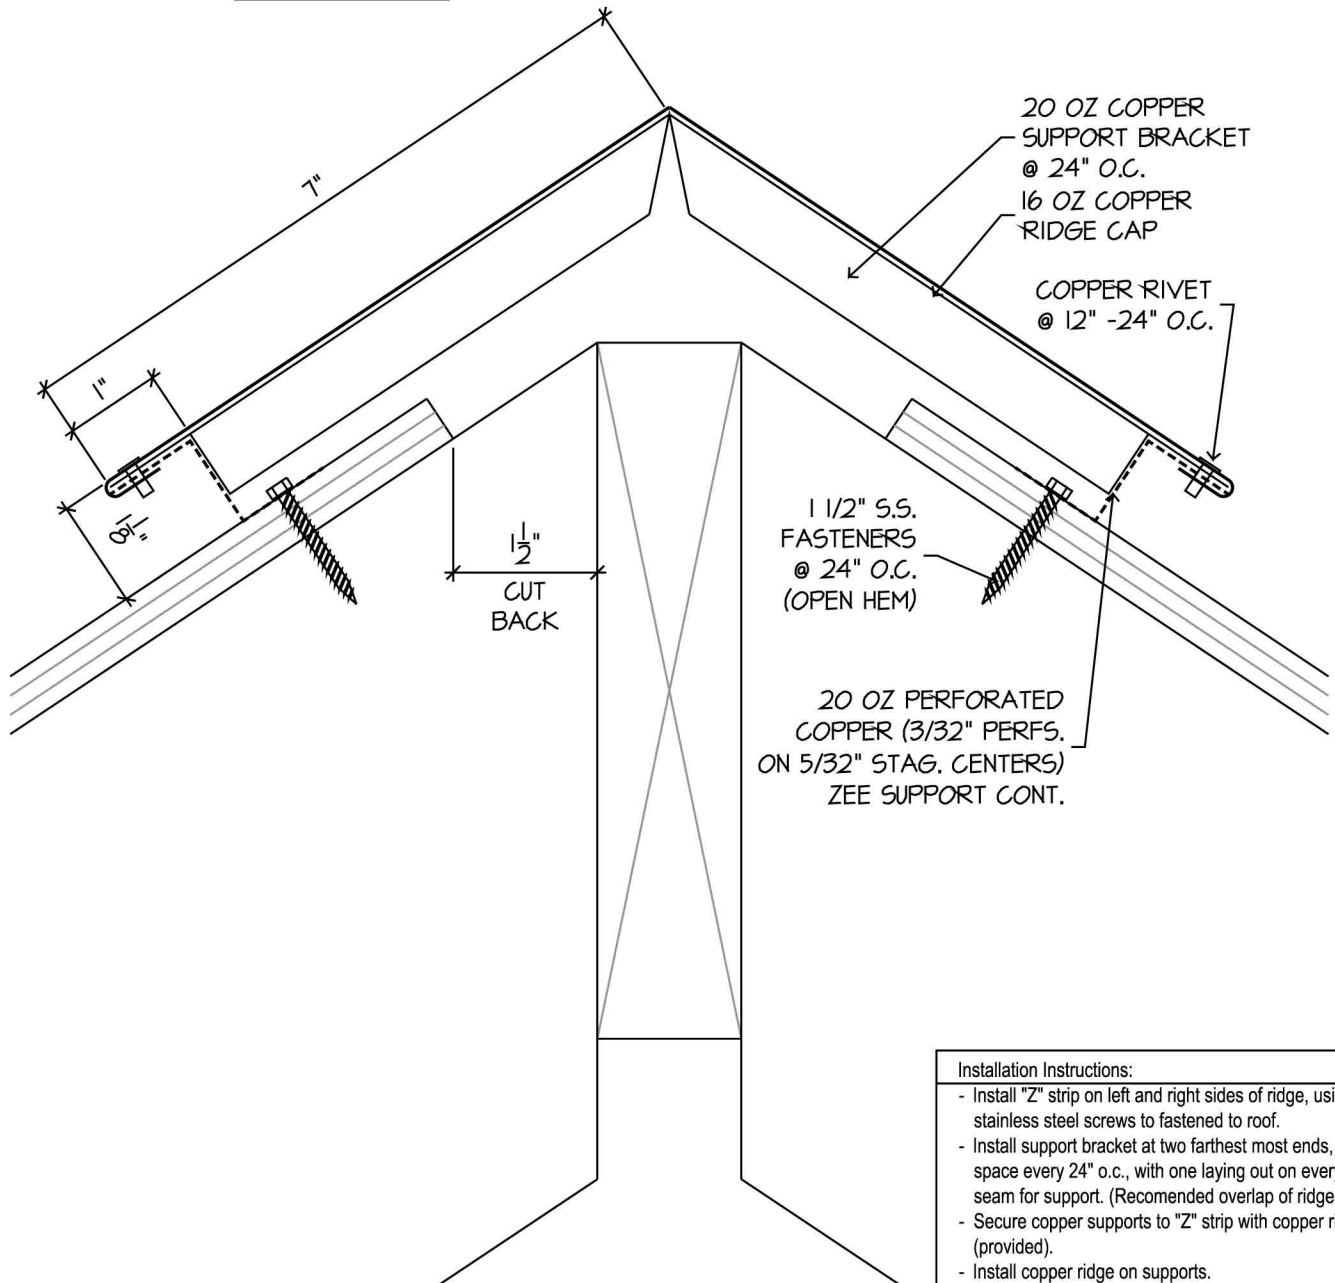

- Installation Instructions:**
- Install "Z" strip on left and right sides of ridge, using 1 1/2" stainless steel screws to fastened to roof.
 - Install support bracket at two farthest most ends, then space every 24" o.c., with one laying out on every ridge seam for support. (Recommended overlap of ridge cap is 3")
 - Secure copper supports to "Z" strip with copper rivets (provided).
 - Install copper ridge on supports.
 - Open hem on ridge is accepted in copper "Z" strip, needs to be closed with hand seammers.
 - Secure ridge to copper supports with copper rivets as necessary.
 - Copper ridge will need to be turned down at gable ends for closure.



OLD WORLD DISTRIBUTORS, INC.

Part No.: Plain Vented Ridge - PVRM2

Available Materials:

- 16 oz Copper 24 ga Zinc
- 24 ga Galvalume
- .040 Kynar Painted Aluminum
- 24 ga Kynar Painted Steel

Notes:

Sheffield Metals standard colors for steel and aluminum material.