



FRONT VIEW OF  
PERFORATED "Z"  
SUPPORT STRIP  
20 OZ 60% NET  
FREE AREA

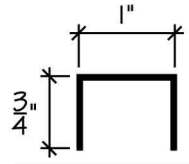

FRONT VIEW OF  
SUPPORT BRACKET

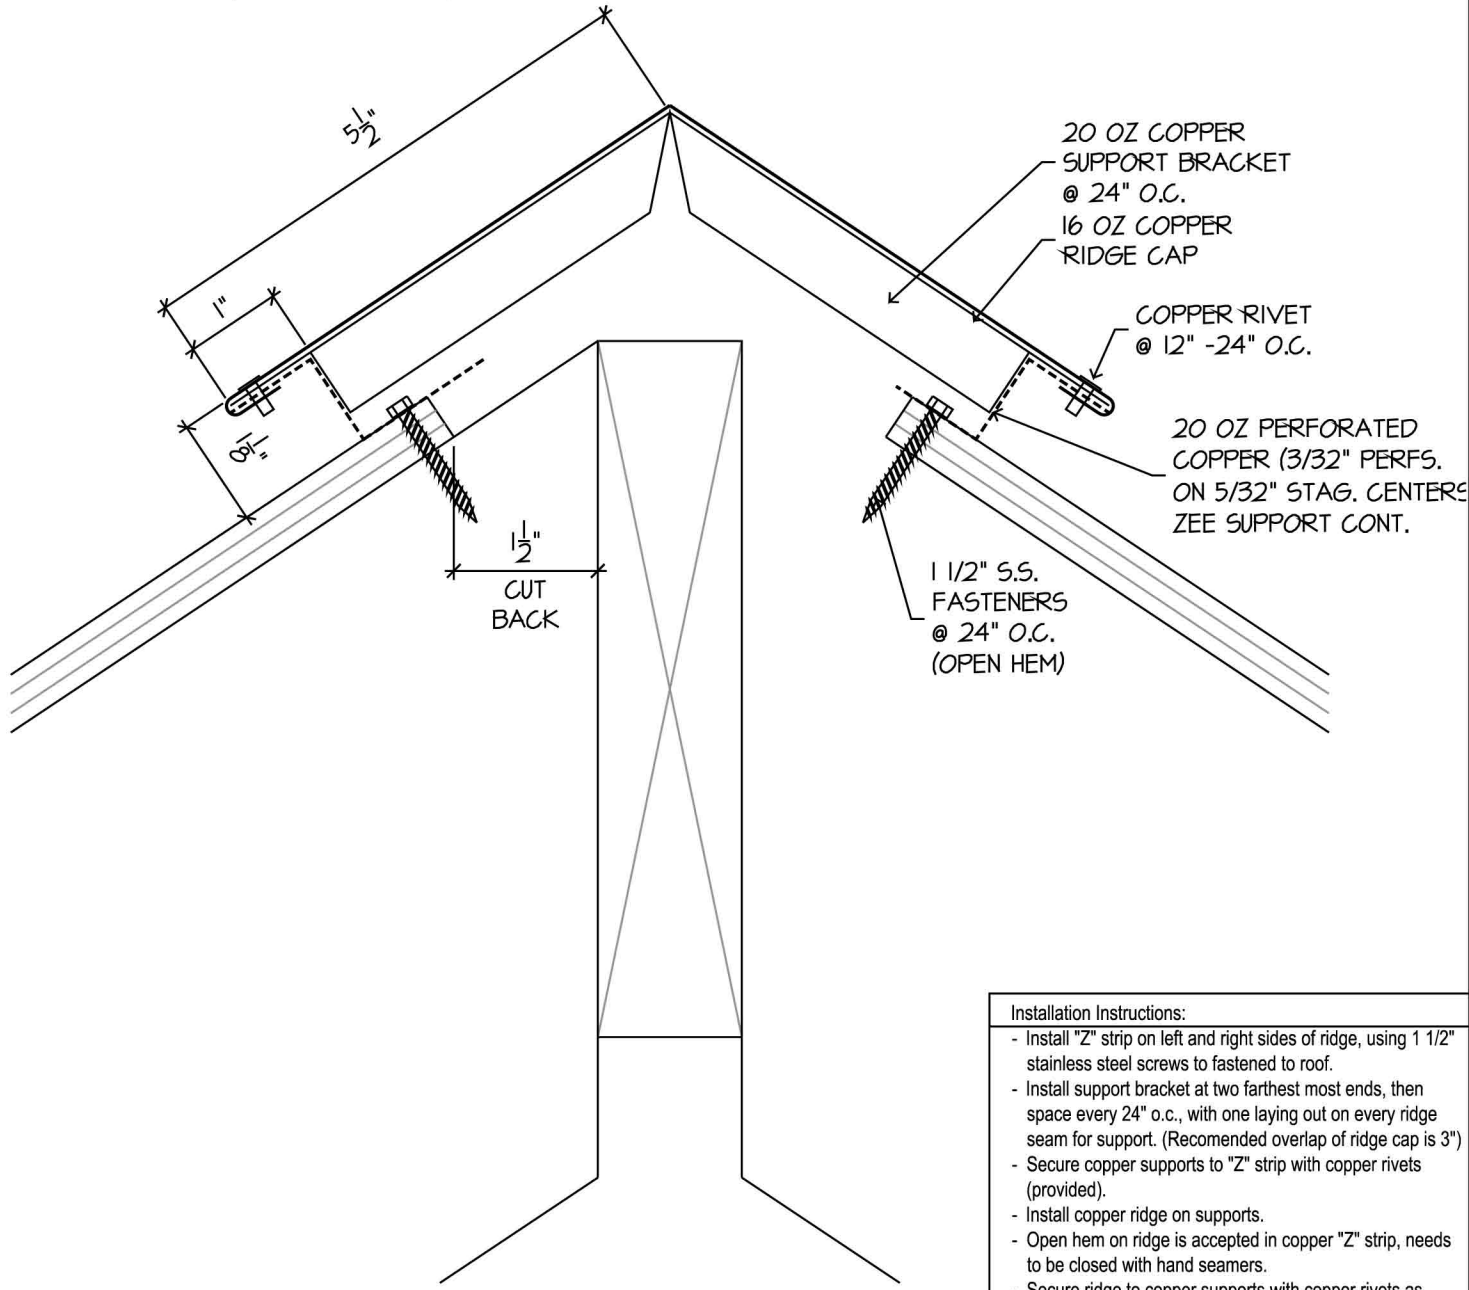

- Installation Instructions:**
- Install "Z" strip on left and right sides of ridge, using 1 1/2" stainless steel screws to fastened to roof.
  - Install support bracket at two farthest most ends, then space every 24" o.c., with one laying out on every ridge seam for support. (Recommended overlap of ridge cap is 3")
  - Secure copper supports to "Z" strip with copper rivets (provided).
  - Install copper ridge on supports.
  - Open hem on ridge is accepted in copper "Z" strip, needs to be closed with hand seamers.
  - Secure ridge to copper supports with copper rivets as necessary.
  - Copper ridge will need to be turned down at gable ends for closure.



**OLD WORLD DISTRIBUTORS, INC.**

Part No.: Plain Vented Ridge - PVR2

Available Materials:  
16 oz Copper      24 ga Zinc  
24 ga Galvalume  
.040 Kynar Painted Aluminum  
24 ga Kynar Painted Steel

Notes:  
Sheffield Metals standard colors for steel and aluminum material.