



FRONT VIEW OF
PERFORATED "Z"
SUPPORT STRIP
20 OZ 60% NET
FREE AREA

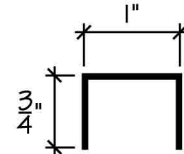

FRONT VIEW OF
SUPPORT BRACKET

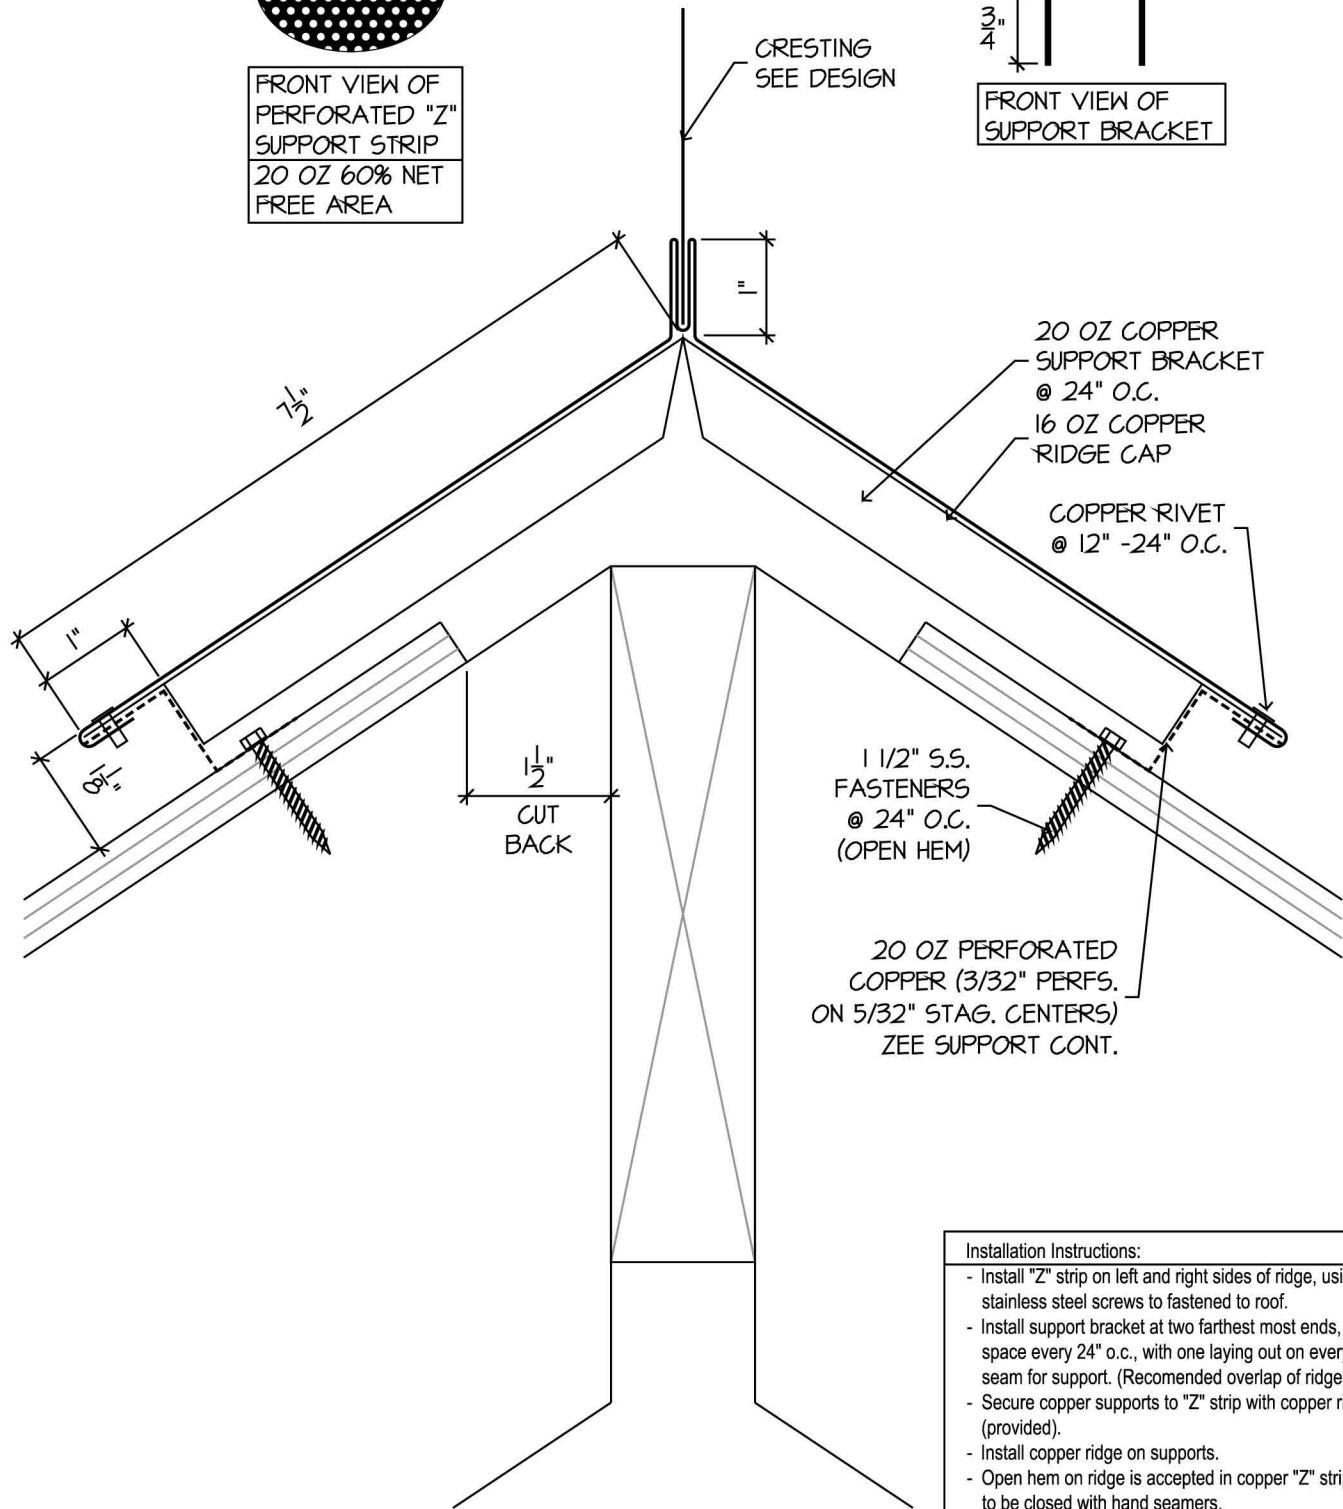

Installation Instructions:

- Install "Z" strip on left and right sides of ridge, using 1 1/2" stainless steel screws to fastened to roof.
- Install support bracket at two farthest most ends, then space every 24" o.c., with one laying out on every ridge seam for support. (Recommended overlap of ridge cap is 3")
- Secure copper supports to "Z" strip with copper rivets (provided).
- Install copper ridge on supports.
- Open hem on ridge is accepted in copper "Z" strip, needs to be closed with hand seammers.
- Secure ridge to copper supports with copper rivets as necessary.
- Copper ridge will need to be turned down at gable ends for closure.



OLD WORLD DISTRIBUTORS, INC.

Part No.: Vented Ridge - RM2

Available Materials:
16 oz Copper 24 ga Zinc
24 ga Galvalume
.040 Kynar Painted Aluminum
24 ga Kynar Painted Steel

Notes:
Sheffield Metals standard colors for steel and aluminum material.