



FRONT VIEW OF  
PERFORATED "Z"  
SUPPORT STRIP  
20 OZ 60% NET  
FREE AREA

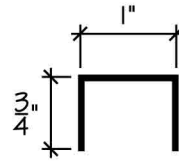

FRONT VIEW OF  
SUPPORT BRACKET

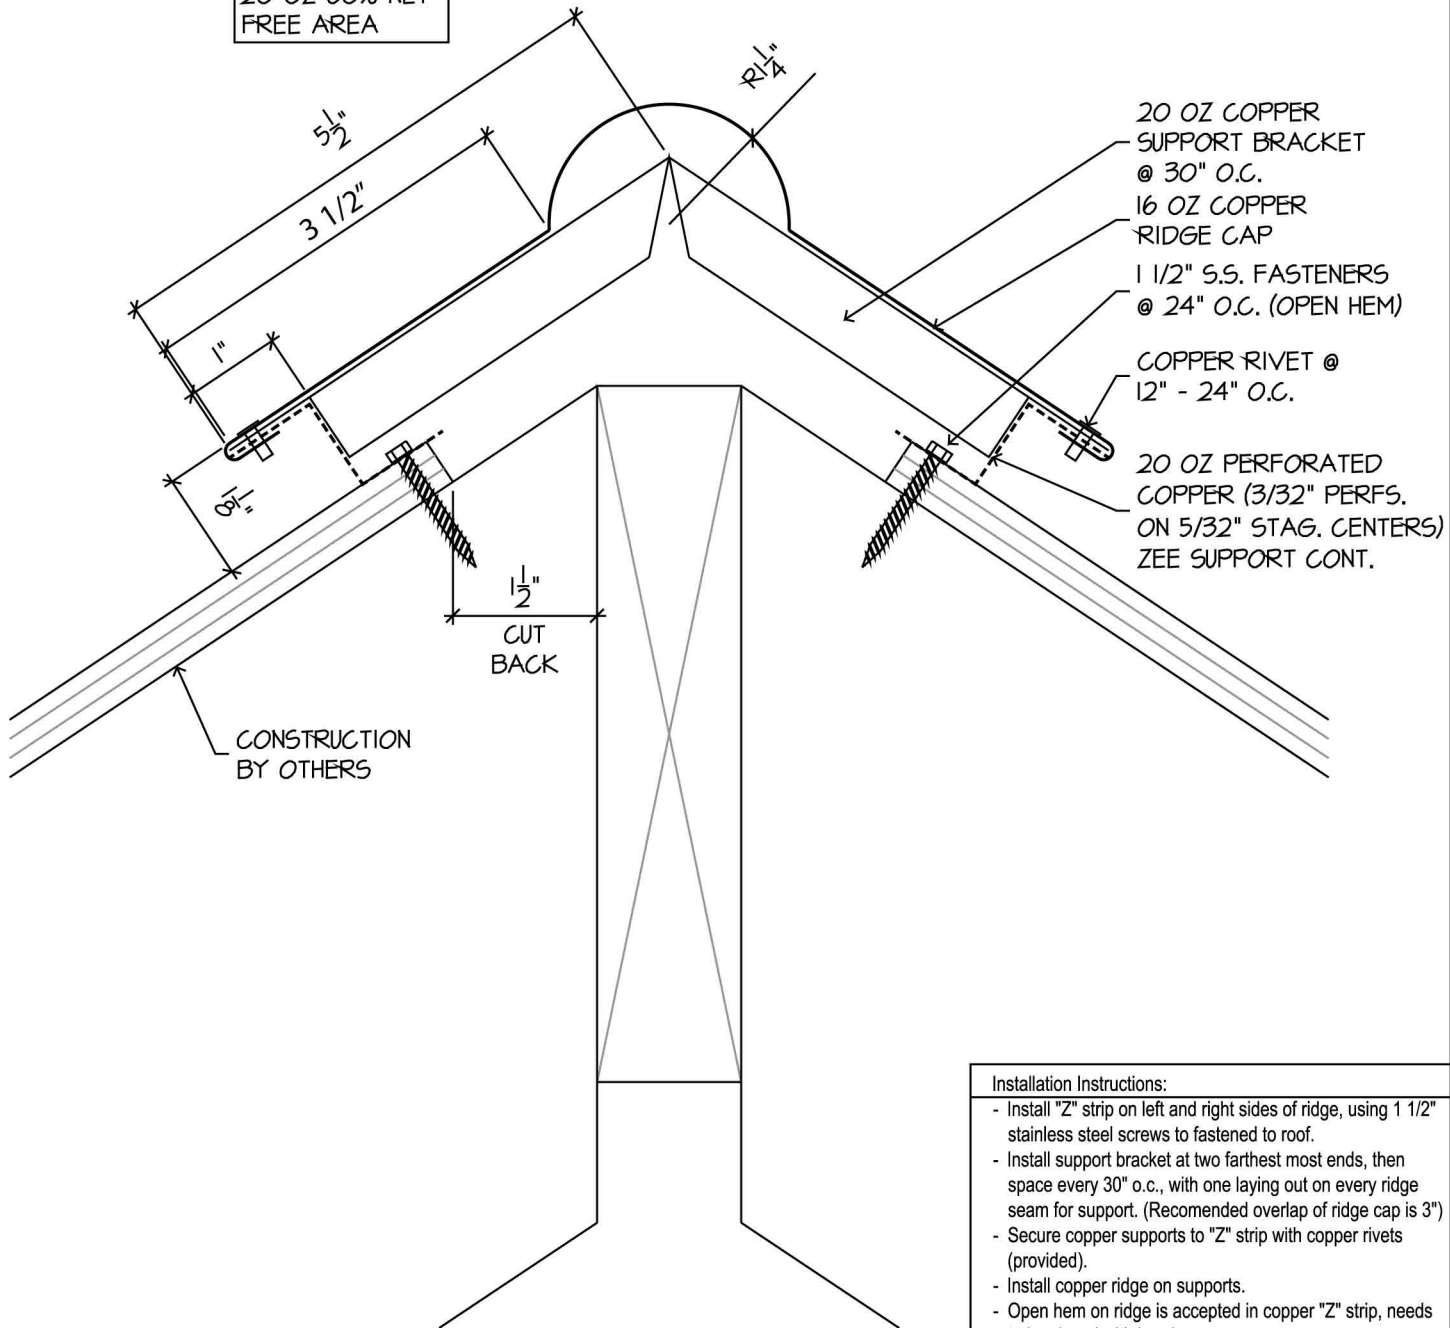

20 OZ COPPER  
SUPPORT BRACKET  
@ 30" O.C.

16 OZ COPPER  
RIDGE CAP

1 1/2" S.S. FASTENERS  
@ 24" O.C. (OPEN HEM)

COPPER RIVET @  
12" - 24" O.C.

20 OZ PERFORATED  
COPPER (3/32" PERFS.  
ON 5/32" STAG. CENTERS)  
ZEE SUPPORT CONT.

**Installation Instructions:**

- Install "Z" strip on left and right sides of ridge, using 1 1/2" stainless steel screws to fastened to roof.
- Install support bracket at two farthest most ends, then space every 30" o.c., with one laying out on every ridge seam for support. (Recommended overlap of ridge cap is 3")
- Secure copper supports to "Z" strip with copper rivets (provided).
- Install copper ridge on supports.
- Open hem on ridge is accepted in copper "Z" strip, needs to be closed with hand seamers.
- Secure ridge to copper supports with copper rivets as necessary.
- Install ridge roll terminator RCTT1 at each end of ridge to complete installation.



**OLD WORLD DISTRIBUTORS, INC.**

Part No.: Vented Ridge Roll - VRR

**Available Materials:**

- 16 oz Copper      24 ga Zinc
- 24 ga Galvalume
- .040 Kynar Painted Aluminum
- 24 ga Kymar Painted Steel

**Notes:**

Sheffield Metals standard colors for steel and aluminum material.